


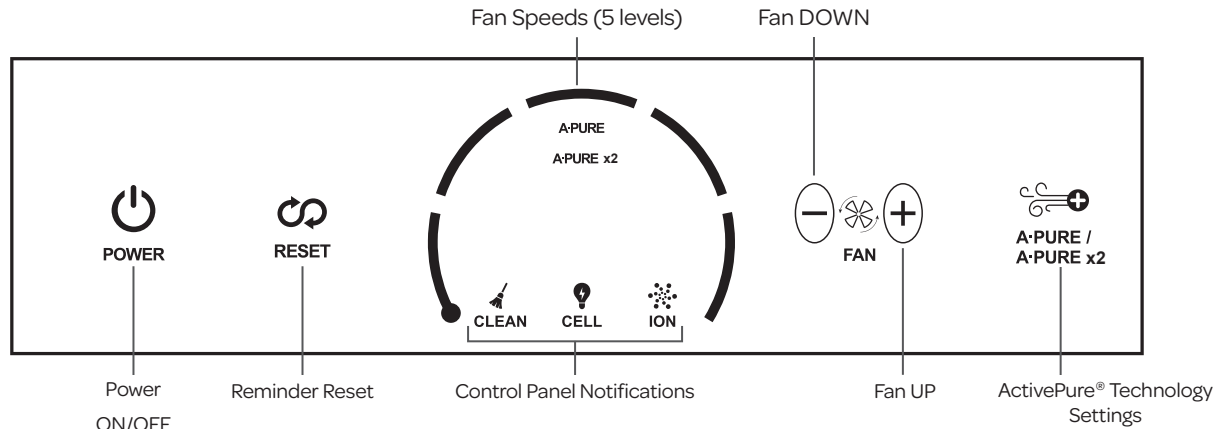

DIRECTIONS FOR USE

1. Take your Vollara Air & Surface Pro unit out of the shipping carton and remove all protective materials.

CAUTION: Read manual carefully for proper use and optimal operation.

2. Place your unit in an appropriate location which should be four feet or higher from the ground. **Never set the unit on the floor.** Place in a location away from the HVAC return duct. The rear of the unit requires one inch or more of open area to allow unrestricted airflow.
3. Insert the Power Supply Plug into the power receptacle on the rear of the unit.
4. Insert the AC Plug on the Power Cord into the Power Supply and the other end into a working electrical outlet.
5. Push the **POWER** button once to turn the unit on. **CELL** and **ION** will illuminate on the screen.
6. Push the **APURE/ A-PUREx2** button once to activate one (1) ActivePure Cell Assembly + Carbon Brushes. **A-PURE** will illuminate on the screen.
7. Push the **A-PURE/A-PURE x2** button twice to activate two (2) ActivePure Cell Assemblies + Carbon Brushes. **A-PURE x2** which will illuminate on the screen.
8. Push the **FAN +** button four times to reach the highest speed (5th level) to initially clear the air in the room. Once the air is cleared, set to the desired fan speed.

NOTE: ActivePure Technology is not working until the **A-PURE/A-PUREx2** button is pressed once.

CONGRATULATIONS!

You are now set up to receive the benefits of your Vollara Air & Surface Pro.



READ MANUAL CAREFULLY FOR PROPER USE
AND OPTIMAL OPERATION.

vollara.com/manuals


SETTINGS & NOTIFICATIONS

- POWER (STAND BY):** Turns the unit ON and OFF.
- RESET:** Clears the maintenance reminders after performing routine maintenance.
- CLEAN:** Illuminates when cleaning is required.
- CELL:** Flashes blue to indicate it's time to replace the ActivePure Cell Assembly.
- ION:** Illuminates to indicate the Carbon Brushes are operating.
- FAN:** Adjusts the 5-speed fan UP and DOWN.
- A-PURE/A-PURE x2:** Toggles the unit between A-PURE Mode and A-PURE x2 Mode.
 - **A-PURE:** Illuminates to indicate One (1) ActivePure® Cell Assembly + Carbon Brushes are operating.
 - **A-PURE x2:** Illuminates to indicate that Two (2) ActivePure Cell Assemblies + Carbon Brushes are operating.

For best results run your Vollara Air & Surface Pro 24/7/365, giving you the benefits of ActivePure Technology day and night.

For maintenance and cleaning instructions, refer to the owner's manual.



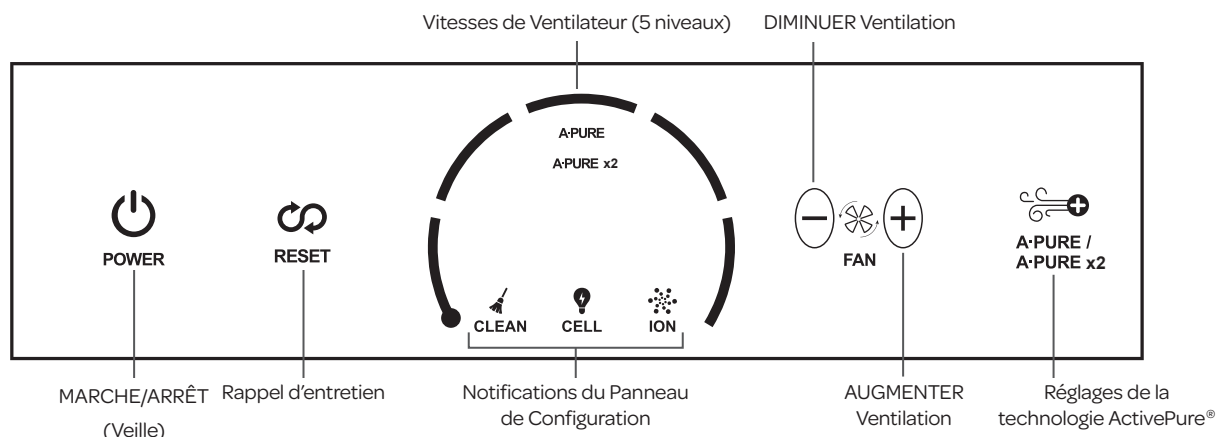

MODE D'EMPLOI

- Sortir l'appareil Vollara Air & Surface Pro de son carton d'expédition et retirer tous les matériaux d'emballage.

ATTENTION: Lire attentivement le manuel afin d'utiliser correctement l'appareil et d'assurer son fonctionnement optimal.

- Placer l'appareil à un emplacement approprié, qui devrait se trouver à quatre pieds ou plus du sol. **Ne jamais poser l'appareil sur le sol.** Placer l'appareil à un endroit éloigné du conduit de retour du CVC. Laisser un dégagement à l'arrière de l'appareil, au moins un pouce, pour permettre à l'air de circuler librement.
- Insérez la fiche d'alimentation dans la prise prévue à cet effet à l'arrière de l'appareil.
- Insérez la prise AC sur le cordon d'alimentation dans l'alimentation et l'autre extrémité dans une prise électrique fonctionnelle.
- Appuyer une fois sur le bouton **POWER** pour mettre l'appareil sous tension **CELL** et **ION** s'allumeront sur l'écran.
- Appuyez une fois sur le bouton **A-PURE/A-PUREx2** pour activer un (1) Assemblage de cellule ActivePure + Broses en Carbone. Le niveau **A-PURE** s'allumera à l'écran.
- Appuyez deux fois sur le bouton **A-PURE/A-PUREx2** pour activer deux (2) Assemblages de cellule ActivePure + Broses en Carbone. Le niveau de **A-PURE x2** s'allumera à l'écran.
- Appuyer quatre fois sur le bouton **FAN +** pour atteindre la vitesse la plus élevée (5e niveau) afin de purifier l'air de la pièce en premier lieu. Une fois l'air purifié, régler la vitesse du ventilateur au niveau souhaité.

REMARQUE: La technologie ActivePure ne fonctionne pas si le bouton A-PURE/A-PURE x2 n'est pas appuyé.

FÉLICITATIONS!

Vous êtes maintenant prête à bénéficier des avantages de votre appareil Vollara Air & Surface Pro.



LIRE ATTENTIVEMENT LE MANUEL AFIN D'UTILISER CORRECTEMENT L'APPAREIL ET D'ASSURER SON FONCTIONNEMENT OPTIMAL.

vollara.com/manuals

RÉGLAGES ET NOTIFICATIONS

- MARCHÉ/ARRÊT (VEILLE):** Met l'appareil sous tension ou hors tension.
- RAPPEL:** Efface les rappels d'entretien une fois l'entretien de routine effectué.
- PROPRE:** S'allume lorsqu'un nettoyage est nécessaire.
- CELLULE:** Clignote en bleu lorsqu'il est temps de remplacer vos Assemblages de cellule ActivePure®.
- ION:** S'allume pour indiquer que seule les Broses en Carbone fonctionnent.
- VENTILATION:** Ajuste le ventilateur à cinq vitesses de AUGMENTER et DIMINUER.
- A-PURE/A-PURE x2:** Bascule l'unité entre le mode **A-PURE** et le mode **A-PURE x2**.
 - A-PURE:** S'allume pour indiquer que un (1) Assemblage de Cellule ActivePure® + les Broses en Carbone fonctionnent.
 - A-PURE x2:** S'allume pour indiquer que deux (2) Assemblages de Cellule ActivePure + les Broses en Carbone fonctionnent.

Pour de meilleurs résultats, exécutez votre Vollara Air & Surface Pro 24/7/365, vous offrant les avantages de ActivePure Technology jour et nuit.

Pour les instructions d'entretien et de nettoyage, reportez-vous au manuel d'utilisation.

